

AC110 Diagnostics

Navigate to diagnostics>AC110>information to display ECU status and software information.



Inputs


- Pin 24 boom switch 7
- Pin 25 master switch
- Pin 26 boom switch 6
- Pin 27 boom switch 5
- Pin 28 boom switch 4
- Pin 29 boom switch 3
- Pin 28 boom switch 2
- Pin 31 boom switch 1
- Pin 32 flow meter input

Status = 1 if N/C
 Status = 1 if On
 Status = 0 if Off



Analog Inputs

- Pin 34 analog rate pressure
- Pin 35 analog not used
- Pin 23 analog/digital not used

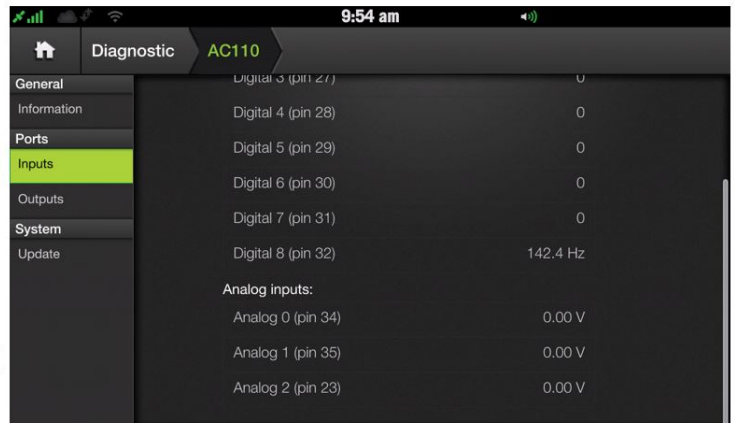

Outputs

- Line = 0 currently not used
- Position = 0 currently not used
- Duty cycle output to the control Reg Valve



Note: Maverix terminals provide internal CAN termination. Installing the terminator could cause issues with operation of rate controller. Termination is required on Rebel and earlier products.