


Logging Terminal GPS and Receiver GPS Logs

Navigate to
diagnostics>terminal>GPS.

Automatic activation starts a
log on every boot up.


Press start to start a new
terminal GPS log.

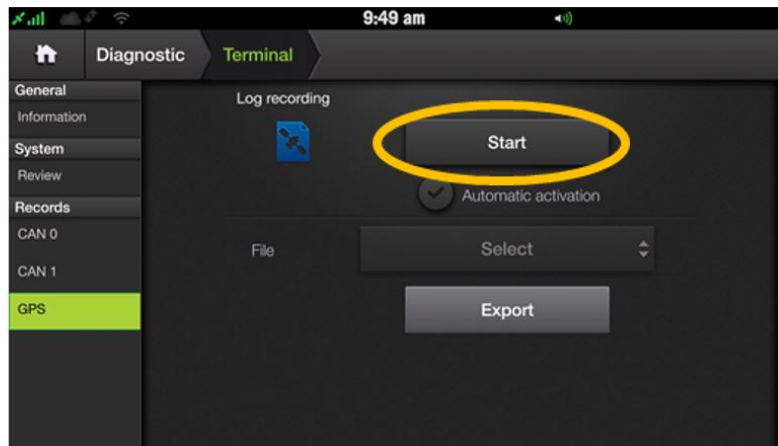

Started log shall be identified
by date timestamp.

When event is captured, user
shall press stop.


If a user forgets to stop
terminal GPS log it shall be
added to files at startup.

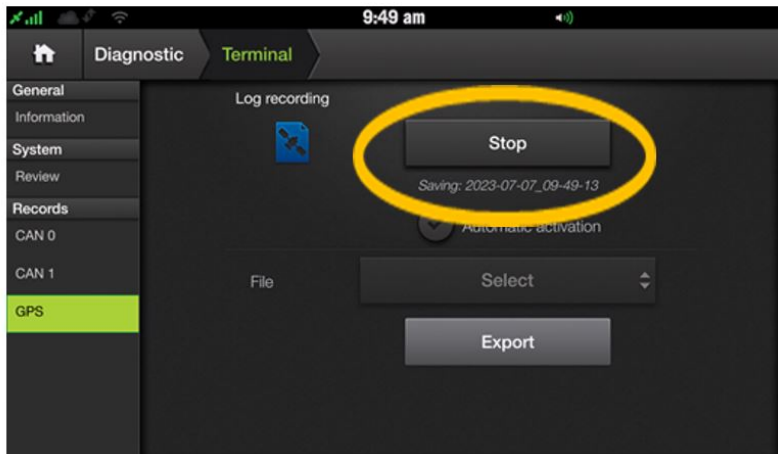

Stopping log shall add the
recorded log to the export file.

Pressing export adds the
terminal GPS log to files.


Should a user forget to export
the log it shall be added to
files on reboot.

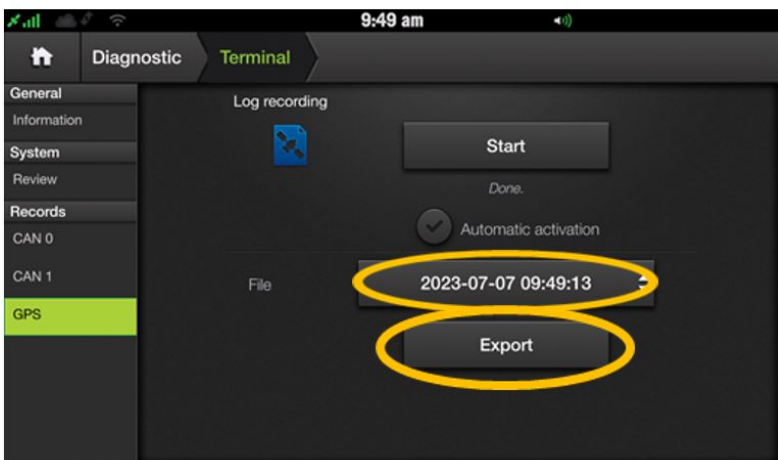

Turn GPS logger to On
position.

Automatic logs date / time
stamp – Manual allows
user to name log.


Press start log to start a
new GPS log.

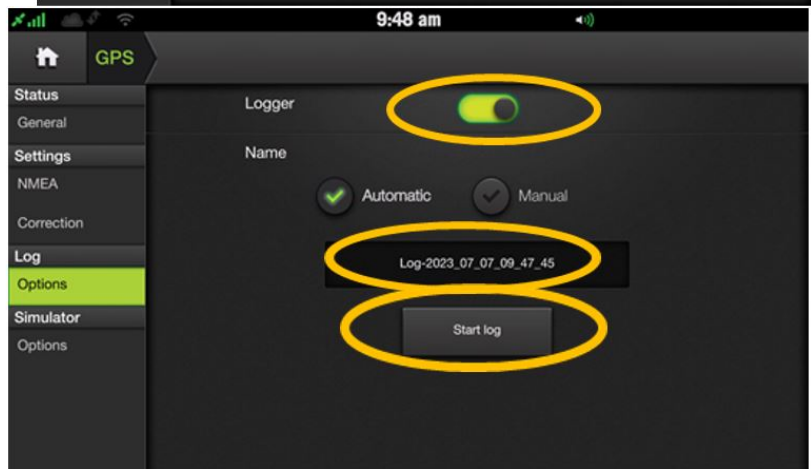

Making log shall appear with a red X icon to stop log.

Press red X stopping log shall add recorded log to GPS log files.

Should user not stop the log it shall be added to files at startup.

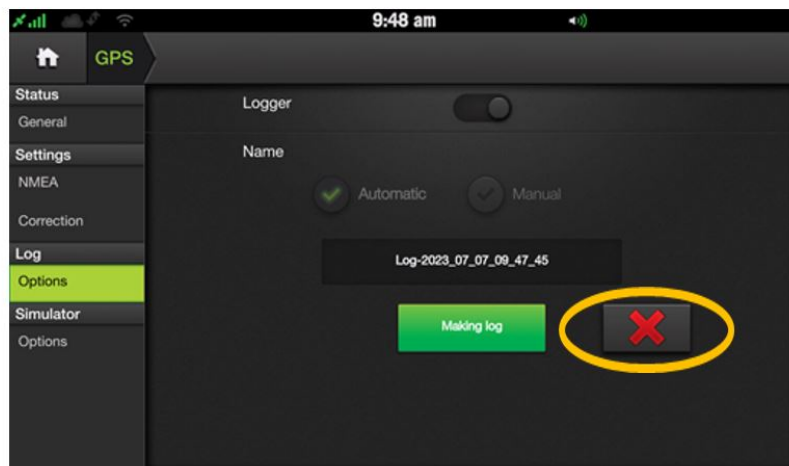

GPS logger only logs GGA and VTG messages at 10 Hz – use the terminal GPS when asked for GPS logs.