

**Hemisphere**  
GPS



# Outback S3

## User Guide Addendum for AutoMate

Part No. 875-0259-000 Rev. A1



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## Copyright Notice

Hemisphere GPS Precision GPS Applications

Copyright © Hemisphere GPS (2010). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GPS.

## Trademarks

Hemisphere GPS<sup>®</sup>, the Hemisphere GPS logo, A220<sup>™</sup>, A221<sup>™</sup>, AerialACE<sup>™</sup>, AirStar<sup>™</sup>, AirTrac<sup>™</sup>, BaseLineHD<sup>™</sup>, BEELINE<sup>®</sup>, COAST<sup>™</sup>, Contour Lock<sup>™</sup>, Crescent<sup>®</sup>, Eclipse<sup>™</sup>, e-Dif<sup>®</sup>, eDrive<sup>®</sup>, eDriveTC<sup>™</sup>, eDriveX<sup>™</sup>, GPSteer<sup>™</sup>, IntelliFlow<sup>®</sup>, Just Let Go<sup>™</sup>, L-Dif<sup>™</sup>, LiteStar II<sup>™</sup>, MapStar<sup>®</sup>, Outback<sup>™</sup>, Outback 360<sup>™</sup>, Outback AutoMate<sup>™</sup>, Outback Guidance Center<sup>™</sup>, Outback Guidance<sup>®</sup>, Outback Hitch<sup>™</sup>, Outback S<sup>™</sup>, Outback S2<sup>™</sup>, Outback S3<sup>™</sup>, Outback S-Lite<sup>™</sup>, Outback Sts<sup>™</sup>, Outback Steering Guide<sup>™</sup>, PocketMAX PC<sup>™</sup>, PocketMAX<sup>™</sup>, Satloc M3<sup>™</sup>, Satloc<sup>®</sup>, the Satloc logo, Vector<sup>™</sup>, X200<sup>™</sup>, and X300<sup>™</sup> are proprietary trademarks of Hemisphere GPS. Other trademarks are the properties of their respective owners.

## Patents

The Outback S<sup>™</sup> and S-Lite<sup>™</sup> automated navigation and steering guide system is covered by U.S. Patents No. 6,539,303 and No. 6,711,501. The Outback Hitch<sup>™</sup> automated hitch control system is covered by U.S. Patent No. 6,631,916. The Outback eDriveTC<sup>™</sup> GPS assisted steering system is covered by U.S. Patent No. 7,142,956. Hemisphere GPS products may be covered by one or more of the following U.S. Patents:

6,111,549	6,397,147	6,469,663	6,501,346	6,539,303
6,549,091	6,631,916	6,711,501	6,744,404	6,865,465
6,876,920	7,142,956	7,162,348	7,277,792	7,292,185
7,292,186	7,373,231	7,400,956	7,400,294	7,388,539
7,429,952	7,437,230	7,460,942		

Other U.S. and foreign patents pending.

**Notice to Customers**

Contact your local dealer for technical assistance. To find the authorized dealer near you, call or write us at:

Outback Guidance

2207 Iowa Street

Hiawatha, KS 66434

Phone: (800) 247-3808

Fax: (785) 742-4584

[www.outbackguidance.com](http://www.outbackguidance.com)

# Warranty Notice

## **Covered Products**

This warranty covers all products manufactured by Hemisphere GPS (the "Products").

## **Hemisphere GPS Limited Warranty**

Hemisphere GPS hereby warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth herein below, that the Products sold to such end purchaser shall be free, under normal use and maintenance, from defects in material and workmanship for a period of 12 months from delivery to such end purchaser. Repairs and replacement components are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship for 90 days from performance or delivery, or for the balance of the original warranty period, whichever is greater.

## **Purchaser's Exclusive Remedy**

The end purchaser's exclusive remedy under this warranty shall be limited to the repair or replacement, at the option of Hemisphere GPS, of any defective Products or components thereof. The end user shall notify Hemisphere GPS or a Hemisphere GPS approved service center immediately of any claimed defect. Repairs shall be made through a Hemisphere GPS approved service center only.

## **Exclusions**

Hemisphere GPS does not warrant damage occurring in transit or due to misuse, abuse, improper installation, neglect, lightning (or other electrical discharge) or fresh/salt water immersion of Products. Repair, modification or service of Hemisphere GPS products by any party other than a Hemisphere GPS approved service center shall render this warranty null and void. Hemisphere GPS does not warrant claims asserted after the end of the warranty period. Hemisphere GPS does not warrant or guarantee the precision or accuracy of positions obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GPS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on:

- Specifications provided by the US Department of Defense for GPS Positioning,
- DGPS service provider performance specifications.

Hemisphere GPS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

## **No Other Warranties**

THE FOREGOING WARRANTY IS EXCLUSIVE OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, IMPLIED OR ARISING BY STATUTE, COURSE OF DEALING OR TRADE USAGE, IN CONNECTION WITH THE DESIGN, SALE, INSTALLATION, SERVICE OR USE OF ANY PRODUCTS OR ANY COMPONENTS THEREOF, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

## **Limitation of Liability**

THE EXTENT OF HEMISPHERE GPS' LIABILITY FOR DAMAGES OF ANY NATURE TO THE END PURCHASER OR ANY OTHER PERSON OR ENTITY WHETHER IN CONTRACT OR TORT AND WHETHER TO PERSONS OR PROPERTY SHALL IN NO CASE EXCEED, THE AGGREGATE, THE COST OF CORRECTING THE DEFECTIVE ITEM. IN NO EVENT WILL HEMISPHERE GPS BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES, EVEN IF HEMISPHERE GPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE FOREGOING, HEMISPHERE GPS SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM INSTALLATION, USE, QUALITY, PERFORMANCE OR ACCURACY OF ANY PRODUCTS.

## **Governing Legislation**

To the greatest extent possible, this warranty shall be governed by the laws of the State of Arizona. In the event that any provision hereof is held to be invalid by a court of competent jurisdiction, such provision shall be severed from this warranty and the remaining provisions shall remain in full force and effect.

## **Obtaining Warranty Service**

In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GPS approved service center along with the end purchaser's proof of purchase. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GPS' approved service centers, contact Hemisphere GPS at the following address:

### **Hemisphere GPS**

Outback Guidance

2207 Iowa Street

Hiawatha, KS 66434

Phone: (800) 247-3808 Fax: (785) 742-4584

[www.outbackguidance.com](http://www.outbackguidance.com)

## **Documentation Feedback**

Hemisphere GPS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GPS with any feedback regarding this guide by writing to the following email address: [DocFeedback@hemispheregps.com](mailto:DocFeedback@hemispheregps.com).

---

# Contents

---

## **Chapter 1 Overview**

Welcome . . . . .	2
What's New . . . . .	2
System Requirements . . . . .	2

## **Chapter 2 Getting Started**

Powering AutoMate . . . . .	4
Configuring AutoMate . . . . .	4
Testing Spray Boom Sections . . . . .	9

## **Chapter 3 Operating AutoMate**

About Jobs . . . . .	12
Job Types . . . . .	12
Data Logging . . . . .	13
Beginning a Basic Spray Job Using AutoMate . . . . .	14
Creating Field Boundaries and No Spray Zones . . . . .	17
Manually Overriding Boom Sections . . . . .	19
Troubleshooting . . . . .	20

## **End User License Agreement**







## **Chapter 1: Overview**

Welcome

What's New

System Requirements



## Welcome

This document is an addendum to the Outback S3 User Guide. It covers configuring and operating AutoMate through the Outback S3 control console.

For additional product support, please refer to the Outback S3 User Guide (875-0196) and the AutoMate User Guide (875-0190), available for download at <http://www.outbackguidance.com>.

## What's New

AutoMate can now be operated directly from the Outback S3 console! From the console, you can:

- Configure basic AutoMate features
- Operate AutoMate and view spray data on the moving map

## System Requirements

- Outback S3 version 2.14.4.15 or higher. The Outback S3 System Setup screen displays the current software version. If you are not running a current version, please download and install the software upgrade from <http://www.outbackguidance.com>.
- AutoMate version 1.11.0001 or higher





## **Chapter 2: Getting Started**

Powering AutoMate

Configuring AutoMate

Testing Spray Boom Sections

This chapter covers:

- Powering AutoMate
- Configuring AutoMate through the Outback S3 console
- Testing spray boom sections

### **Powering AutoMate**

AutoMate is powered through the rate controller. Switch on the rate controller to turn on AutoMate.

### **Configuring AutoMate**

Most settings are configured through the Outback S3 guidance screens. No configuration is necessary on the AutoMate controller for most users.

Before operating AutoMate, define the following in Outback S3:

- Basic job settings in the **Vehicle Setup** screen (skip/overlap, swath and antenna offsets)
- Individual boom and planter section control settings in the AutoMate setup screen (section widths, look ahead, and percent coverage)




---

**Note:** Overall boom offset is set in the "Swath Offset" field on the main **Vehicle Setup** screen.

---

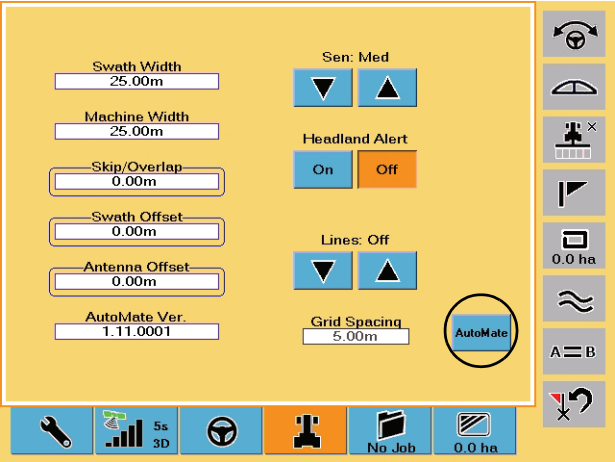 



**To configure AutoMate:**

Step	Screen Item (when applicable)
<p>1. From the Outback S3 controller, open the <b>Vehicle Setup</b> screen.</p>	 <p>The screenshot shows the Vehicle Setup screen with the following settings: Swath Width: 25.00m, Machine Width: 25.00m, Skip/Overlap: 0.00m, Swath Offset: 0.00m, Antenna Offset: 0.00m, AutoMate Ver.: 1.11.0001, Sen: Med, Headland Alert: On, Lines: Off, Grid Spacing: 5.00m. A button labeled 'AutoMate' is circled in red. The bottom status bar shows 'No Job' and '0.0 ha'.</p>
<p><b>Figure 2-1: Vehicle Setup screen.</b></p> <hr/> <p><b>Note:</b> The AutoMate button will change to  if no AutoMate was detected at startup. Connect AutoMate and press  to detect AutoMate.</p> <hr/>	



Step	Screen Item (when applicable)
2.	On the <b>Vehicle Setup</b> screen, review and edit your current job settings. Review your Outback S3 system documentation if this is your first time using the Outback S3.
<p><b>Note:</b> Machine Width is automatically calculated by the boom section widths set in the <b>AutoMate Setup</b> screen.</p>	

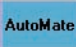

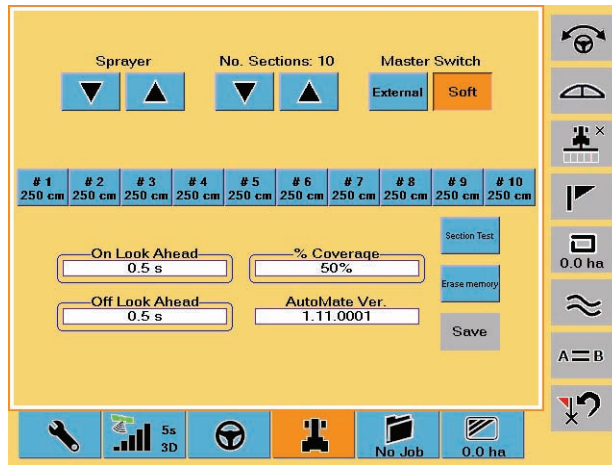


3. Press  to open the **AutoMate setup** screen.



**Figure 2-2: AutoMate Setup screen.**


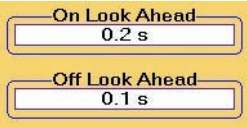
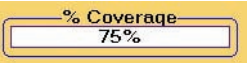


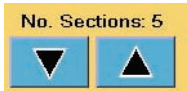**Note:** Any changes on the **AutoMate Setup** screen must be saved manually by pressing  .



Step	Screen Item (when applicable)
<p>4. Select the <b>Master Switch</b> setting.</p> <ul style="list-style-type: none"> <li>• <b>Soft</b> - Controls the Master switch through the <b>Apply</b> button in the Outback S3.</li> <li>• <b>External</b> - Used for Planting mode and when using an external master switch.</li> </ul>	
<p>5. Select the mode using the up and down arrow keys. Available modes include:</p> <ul style="list-style-type: none"> <li>• Electric planter</li> <li>• Air planter</li> <li>• Sprayer</li> </ul>	
<p>6. Set the number of boom sections using the up and down arrows.</p> <hr/> <p><b>Note:</b> The mode selected in step 5 determines the maximum number of sections.</p>	
<p>7. Set the individual boom section widths.</p> <ol style="list-style-type: none"> <li>Press a boom section button (for example, #1).</li> <li>Enter the width using the <b>Width</b> pop-up screen.</li> <li>Press .</li> </ol>	



## 2: Getting Started

Step	Screen Item (when applicable)
<p>8. Set the Look Ahead times (On/Off) in the “On Look Ahead” and “Off Look Ahead” fields. Press  to save.</p> <hr/> <p><b>Note:</b> Look ahead times compensate for delays in the spray system caused by the speed at which the boom valves can open and close and the vehicle’s speed. For additional information, please see the AutoMate User Guide.</p>	
<p>9. Set the Percent Coverage in the “% Coverage” field.</p> <hr/> <p><b>Note:</b> Percent coverage is the amount of the boom section that must enter a previously applied area before AutoMate will turn it off. For example, if the percent coverage is set to 75%, then 75% of a given section must enter an applied area before shutting off, potentially leaving a skip of 25%. AutoMate allows a percent coverage anywhere from 5% to 100% in increments of 5%.</p>	
<p>4. Press .</p> <hr/> <p> <b>Warning!</b> You must press the <b>Save</b> button or you will lose your settings.</p>	



## Testing Spray Boom Sections

After configuring AutoMate, you will need to test the spray boom sections. The **Section Test** window is accessible from the main **AutoMate Configuration** screen.

AutoMate will turn on each boom section consecutively for five seconds.

---

**Note:** If you have made any recent changes in the number of sections you must save the changes in order for them to be reflected in the section test.

 

---



---

**Note:** Speed must be less than 1 mph to perform a section test.

---

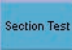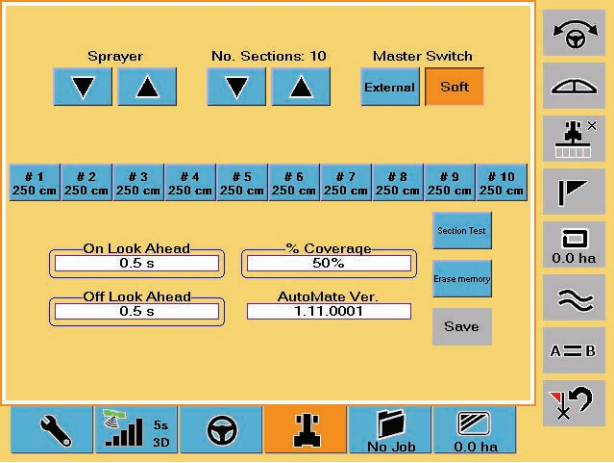 

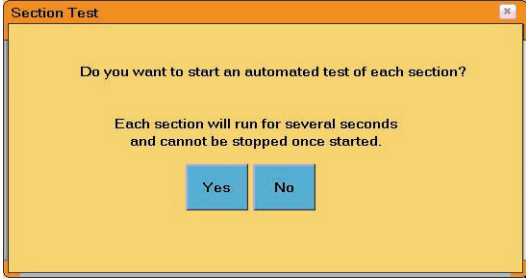
Step	Screen Item (when applicable)
<p>1. On the <b>AutoMate Configuration</b> screen, press</p>	<div style="text-align: right; margin-bottom: 10px;">  </div> 

**Figure 2-3: AutoMate Configuration screen.**





## 2: Getting Started

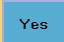Step	Screen Item (when applicable)
2. Press  to start the automated test. Press  to cancel.	





## **Chapter 3: Operating AutoMate**

About Jobs

Beginning a Basic Spray Job Using AutoMate

Creating Field Boundaries and No Spray Zones

Manually Overriding Boom Sections

Troubleshooting

This chapter covers AutoMate operation with the Outback Guidance S3 system. It includes the following sections:

- About jobs
- Beginning a basic spray job using AutoMate
- Creating field boundaries and no spray zones
- Manually overriding boom sections
- Troubleshooting

## About Jobs

### Job Types

Outback S3 with AutoMate supports four types of jobs:

1. **Standard job** - The simplest way to use AutoMate is to start a job in the Outback S3 and begin spraying. AutoMate will generate an as-applied record of spray activity.
2. **Job with field boundary** - AutoMate allows you to create a no-spray boundary by creating a field boundary in Outback S3. After making an initial spray pass around the boundary of the field, AutoMate will create a no-spray zone around the boundary of the field.
3. **Job with no-spray zones** - AutoMate allows you to create up to eight no-spray zones within a job. This is a useful feature for areas such as waterways, well heads and other no-spray areas. Set the no-spray zones in the Outback S3 and drive around the no-spray zone while spraying. AutoMate will create a no-spray zone within the area sprayed around, and turn off any boom sections that enter the no-spray zones.
4. **Job with field boundary and no-spray zones** - For complete control, the operator can generate both a field boundary and up to eight no-spray zones for a job. Simply use the field boundary and no-spray zone menus on the S3 and spray around the areas that are not to be sprayed.



## Data Logging

The AutoMate controller saves all job swath information until manually erased. When AutoMate has less than 20% of available memory remaining, you will see the following message on the Outback S3 **Map** screen:

**WARNING! AutoMate memory low**

If this warning appears, press  on the **AutoMate Configuration** screen.

---

**Note:** Erasing memory will erase previously applied areas in AutoMate.


---





## Beginning a Basic Spray Job Using AutoMate

Before beginning a job, configure basic job settings. See Chapter 2, “Getting Started” for configuration instructions.

### To start a job:

Step	Screen Item (when applicable)
1. Turn on the Outback S3.	
2. The <b>Getting Started</b> screen appears. <ul style="list-style-type: none"><li>• <b>New Job:</b> Begins a new job.</li><li>• <b>Continue Job:</b> Continues a previous job.</li><li>• <b>List Jobs:</b> Displays a list of jobs.</li></ul>	

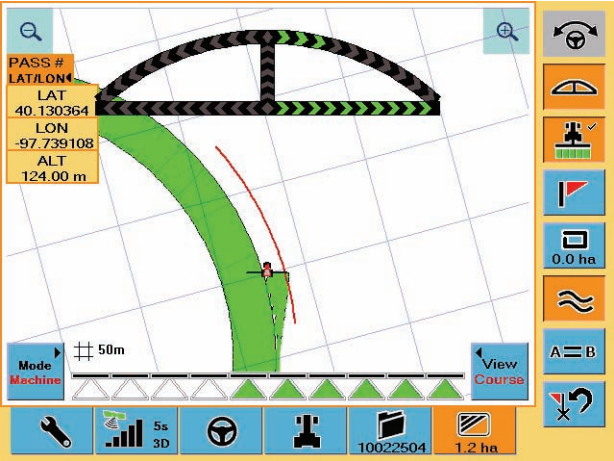

Step	Screen Item (when applicable)
<p>3. Select <b>New Job</b> and begin driving your field. AutoMate will begin application when:</p> <ul style="list-style-type: none"> <li>• Master switch is ON</li> <li>• Ground speed is detected</li> <li>• AutoMate recognizes that boom sections are in an unapplied area.</li> </ul>	 <p>The screenshot shows a map interface with a grid. A green path curves through the field. A scale bar indicates 50m. A data box on the left shows: PASS #, LAT/LON, LAT 40.130364, LON -97.739108, ALT 124.00 m. A bottom toolbar contains icons for a wrench, 5s 3D, a steering wheel, a boom icon, 10022504, and 1.2 ha. A right sidebar has buttons for a steering wheel, a boom, a flag, 0.0 ha, a wavy line, A=B, and a return arrow. A 'View Course' button is at the bottom right.</p>
<p><b>Figure 3-4: Outback S3 Map screen.</b></p>	
<p><b>Note:</b> The spray status icons at the bottom of the screen indicate which boom sections are active (green) or inactive (gray).</p>	
<p>4. Using the <b>Map</b> screen as a guide, press the <b>Apply</b> button to adjust spray status. See Table 3-1 for <b>Apply</b> button states.</p>	







---

**Note:** If entering an area that has already been sprayed, AutoMate will automatically turn off the boom or booms that have entered the previously sprayed area.

---

**Table 3-1: Apply Button Key**

Master Switch Mode	State	Apply Button
Soft	On	
Soft	Off	
External	On	
External	Off	

**Tip:**


- **Soft** - Controls the Master switch through the **Apply** button in the Outback S3.
- **External** - Used for Planting mode and when using an external master switch.



## Creating Field Boundaries and No Spray Zones


For help creating field boundaries and no-spray zones, please refer to your Outback S3 User Guide. This area provides a brief overview of using these with AutoMate.

### To create field boundaries and no-spray zones:

Step	Screen Item (when applicable)
1. Start a standard AutoMate Job (see "Beginning a Basic Spray Job Using AutoMate" on page 14).	
2. Select the Outback S3 <b>Perimeter</b> button.	



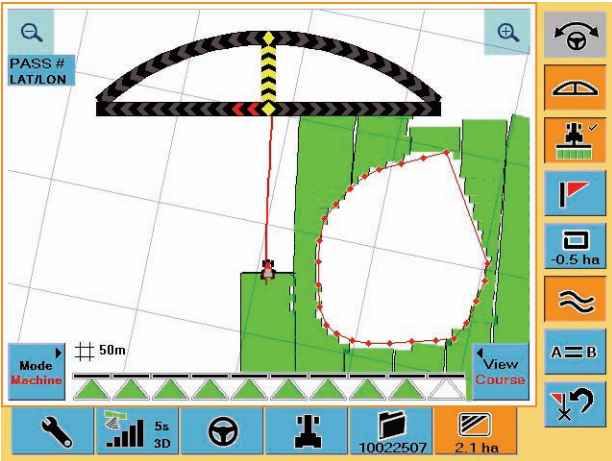

Step	Screen Item (when applicable)
<p>3. On the <b>Perimeter</b> screen, set the desired boundary settings.</p> <ul style="list-style-type: none"> <li>• Select “Include” to set a field boundary.</li> <li>• Select “Exclude” to set a no-spray zone.</li> </ul>	 <p>The screenshot displays a top-down view of a field with a red dashed line indicating a perimeter. A yellow and black striped arrow points to a specific location on the perimeter. The interface includes a search bar at the top left, a scale bar for 50m, and a 'Mode Machine' indicator. A toolbar on the right side contains icons for navigation and control. At the bottom, there are icons for a wrench, a 5s 3D bar chart, a steering wheel, a tractor, a folder labeled '10022507', and a field area of '2.1 ha'.</p>
<p>4. Make an initial pass around your desired boundary to set it in Outback S3. AutoMate will automatically turn off booms when approaching a field boundary or no-spray zone.</p>	

**Figure 3-5: Exclude Perimeter example.**




## Manually Overriding Boom Sections

AutoMate allows the operator to manually override all sections. This feature is used to back into a corner and start spraying before reaching the minimum speed.

To override the booms, you must:


- Be stopped or moving less than 1 mph
- Set the Master Switch to **Soft**
- Turn the **Apply** button on

### To manually override boom sections:

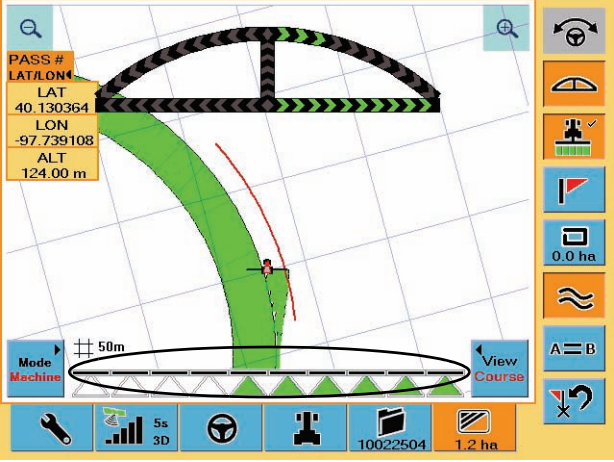Step	Screen Item (when applicable)
1. At the bottom of the <b>Map</b> screen, press the spray status icons.	 <p>The screenshot shows the AutoMate Map screen. At the bottom, there is a toolbar with several icons. The spray status icons are located on the right side of the screen, within a vertical sidebar. These icons include a compass, a boom icon, a machine icon, a flag icon, a 0.0 ha area icon, a wavy line icon, an A=B icon, and a spray status icon. The map itself shows a green spray path and a boom. A sidebar on the left displays coordinates: PASS #, LAT/LONG, LAT 40.130364, LON -97.739108, and ALT 124.00 m. A 50m scale bar is also visible.</p>

**Figure 3-6: Spray status icons on Map screen.**

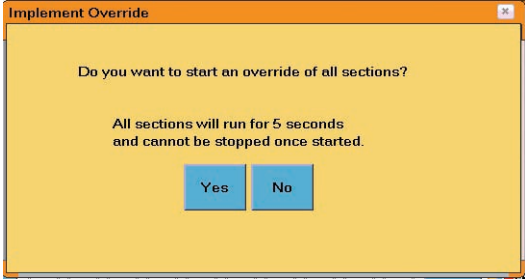

Step	Screen Item (when applicable)
<p>2. Press <input type="button" value="Yes"/> to start the override. Press <input type="button" value="No"/> to cancel.</p>	

## Troubleshooting

Table 3-2 describes possible AutoMate error messages and solutions.

**Table 3-2: Troubleshooting Error Messages**

Warning	Solution
AutoMate Communication Error	Warning displays if AutoMate loses communication for more than two seconds. Check cables or AutoMate power.
WARNING: AutoMate Memory Low	Warning displays if AutoMate has less than 20% of available memory left. Press <input type="button" value="Erase memory"/> on the <b>AutoMate Configuration</b> screen.





## **End User License Agreement**

## END USER LICENSE AGREEMENT

**IMPORTANT** - This is an agreement (the "**Agreement**") between you, the end purchaser ("**Licensee**") and Hemisphere GPS Inc. ("**Hemisphere**") which permits Licensee to use the Hemisphere software (the "**Software**") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "**Product**". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "**Software**"), solely in binary executable form.
2. **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
  - a. install or use more copies of the Software than the number of copies that have been licensed;
  - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
  - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
  - d. modify or create derivative works based on the Software;
  - e. sub-license, rent, lease, loan or distribute the Software;



- f. permit any third party to use the Software;
  - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
  - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
  - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("**Update**") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
4. **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at any time.
5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
7. **TRADEMARKS.** "Hemisphere GPS", "Outback Guidance", "BEELINE", "Crescent", "Eclipse" and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media



will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.

9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (LIMITED WARRANTY). Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free. will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GPS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY,



ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.

11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.
12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.
13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT





NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.

16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere.
19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a) negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product, (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a



commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.

20. The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights
21. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption.
22. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections OWNERSHIP. Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold. , TRADEMARKS. "Hemisphere GPS", "Outback Guidance", "BEELINE", "Crescent", "Eclipse" and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners., LIMITED WARRANTY. Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the



foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free. , WARRANTY EXCLUSIONS. The warranty set forth in Section (LIMITED WARRANTY. Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free. will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GPS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable. , WARRANTY DISCLAIMER. EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE., LIMITATION OF LIABILITY. IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE



POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH., INDEMNIFICATION. Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption. , FORUM FOR DISPUTES. The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief. and APPLICABLE LAW. This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence. herein shall survive the expiry or termination of this Agreement for any reason.

23. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
24. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
25. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.



26. **FORUM FOR DISPUTES.** The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
27. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.
28. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.
29. **GENERAL.** This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.





[www.hemispheregps.com](http://www.hemispheregps.com)