


# How to Perform a Terminal/ECU Default

The following reasons are why a default should be done on your terminal or ECU.

- 1) You start your terminal and a default vehicle and/or implement is constantly brought up instead of the current vehicle and/or implement you have already created. (This happens the most on the STX.)
- 2) If your vehicle or implement settings keep getting lost.
- 3) If your calibrations are not saved or you re-calibrate and the information doesn't hold.

Use the following instructions on how to accomplish a terminal/ECU default

- 1) Press **Menu** -> **Diagnostics** -> **GPS** -> **Subscriptions**
- 2) Press **Enter Code**
- 3) Enter **7378423** and touch **Done**
- 4) The Service Page is now available and either **ECU** or **Terminal Default** can be selected

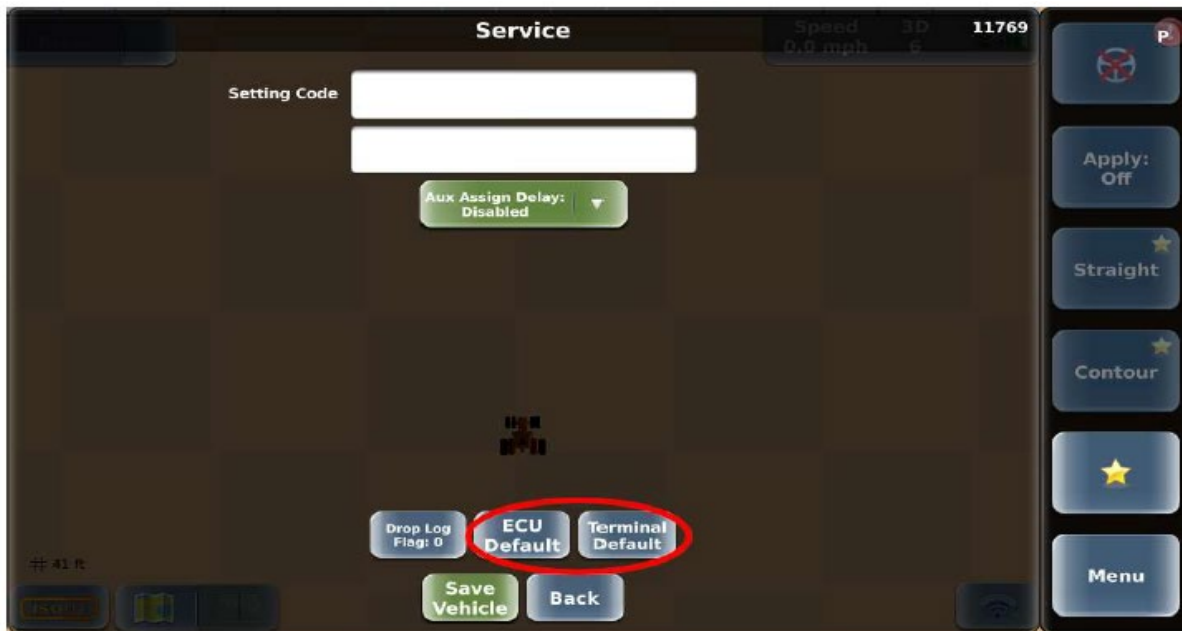

The terminal and/or ECU will need to be rebooted after a default reset. See below for all actions required after rebooting your terminal or ECU.

**Terminal Default-** A new vehicle and/or implement profile will need to be made and a calibration completed.

**eDriveXD Default-** No actions other than the ECU reboot are needed.

**eDriveXC Default-** Re-calibration will be required after the ECU reboot.