


## If Tractor is ISO Ready

On back of tractor there is an ISO Implement Connector  
(See example to the right) →

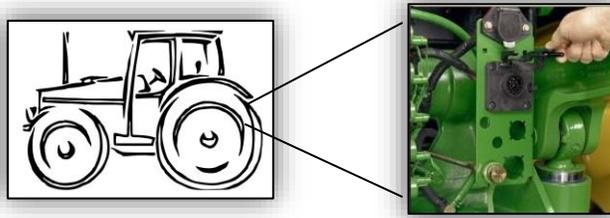

(Usually located around the hydraulic remote hookups)

### You will need the following:

Required: New Blue MAX cable (Part # 051-0392-000#)



Optional: ISO Adapter/Extension Cable (Part # 054-0197-000#)

*Note: This cable is optional depending on the tractor you are using. The cable extends out the 4 pin Deutsch found on the Blue MAX cable, and includes a gender changed 4 pin Deutsch as well as a 9 pin AMP connector.*



## If Tractor is not ISO Ready

There is no ISO implement connector on the back of the tractor.

### You will need the following:

Required: New Blue MAX cable (Part #051-0392-000#)

Required: ISOBUS Retrofit Kit

- Two kits available
  - o Short Kit (Standard Tractors) Part # 910-5005-000
  - o Long Kit (Articulated Tractors) Part # 910-5006-000
- Both kits include:
  - o ISOBUS Retrofit Assembly (ISO Implement Connector and housing and 4 pin Deutsch connector). Main Power Harness cable (this will run straight to the battery) and a Data-Relay Cable (This will plug into the 4 pin Deutsch and run into the cab plugging into the new Blue MAX cable.



*Note: You will not need the ISO Adapter/Extension cable on a NON-ISO Ready tractor because we are providing the hookup and will have the 4 pin Deutsch that the Blue MAX cable needs.*